
The Stitch House @sew dallas

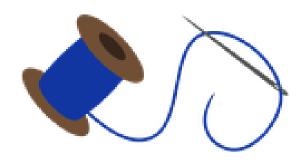

Beginner's Luminaire XP2 Club

Today you will learn:

How to navigate the Home Screen Page

- Sewing and Embroidery Functions
- What the top and bottom tool bars are and how to use them
- How to get help if you are "stuck"
- Where the videos are
- How and why to change settings on your machine
- What a stitch preview is and how and when to use it
- How to "get back" to your factory settings



Wait! There's More!!

How to make a Box Bag

- Insert a zipper
- Insert tabs
- Sew Seams
- Gusset (box) Corners
- Zig Zag Edges



Sewing and Embroidery Functions




Opening Screen



Time/Date-touch to set the calendar/clock

Top Tool Bar

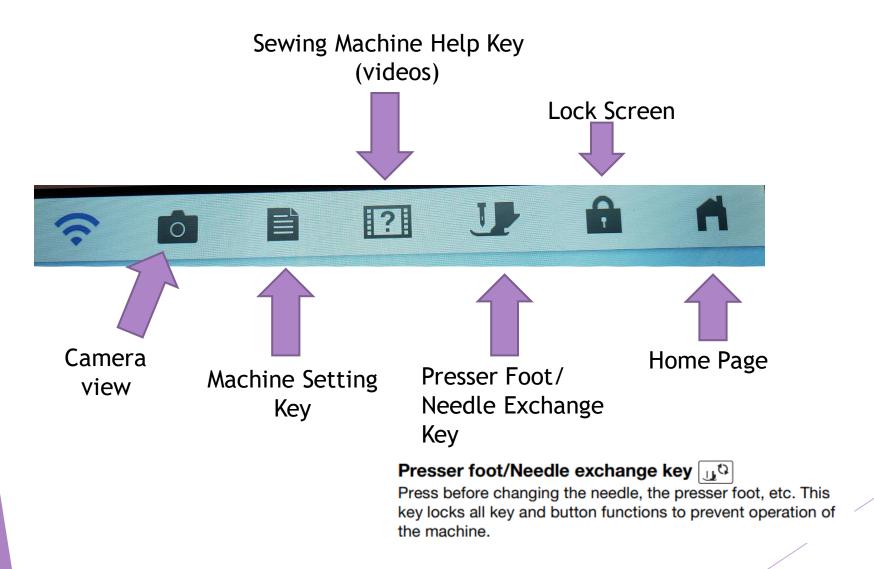


Sewing Machine Help

Operation Guide

- Principal Parts
- Principal Buttons
- Basic Operation (threading)
- Embroidery Basic Operation
- Troubleshooting
- Maintenance

Sewing Guide

- Various stitches
- Buttonholes/buttons
- General sewing instruction

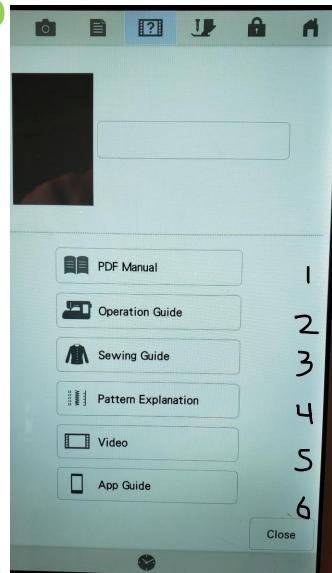

Pattern Explanation

- Choose stitch 1-19
- Press Sewing Machine Help
- Touch Pattern Explanation
- Use the right arrow key to scroll through additional pages and follow the step-bystep instructions for how to sew the stitch
- Press Return two times to go back to the main screen
- Touch OK to exit

Video

- Choose Basic Operation
- Select the video for Bobbin Winding
- Press Play to watch
- Press Stop to end
- Press Repeat to watch again
- Press Close to return to the video list
- Press Return to go back to the main screen
- Touch OK to exit



App Guide

- Apps you can get on your phone or tablet.
- My Stitch Monitor keeps track of the progress of your embroidery project.



 My Design Snap makes it easy to send pics from your mobile device to your XP2 wirelessly.

In the App:


- Tools icon: tap to verify you are connected to your XP2.
- Under My Design Center, tap "Select image for pattern editing".
- Choose the image you want to transfer.
- Tap "send to the machine".






Brother Design Database Transfer


- In the internet search bar of your computer type in "Brother Design Database Transfer".
- Read the information and tap the box that will take you to the download page.
- Follow the directions from there to download.
- To use:
- Find the correct file folder on the left.
- Choose the design.
- Tap the down arrow.
- Tap the icon near the bottom left to send to your XP2.

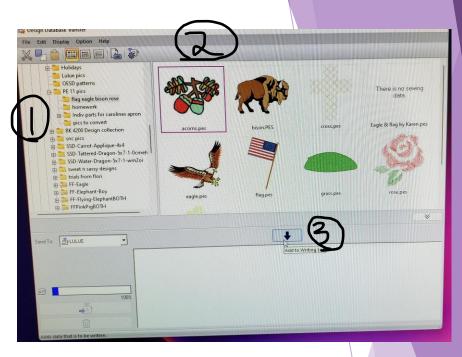

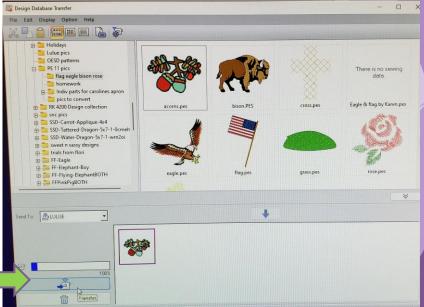

Machine Settings Screenpage 1 of 12


- Automatic Fabric Sensor System-the machine will automatically detect the thickness of the fabric and adjust to ensure the fabric is fed smoothly
- Adjustments and Presser Foot settings best to leave at default settings
- Automatic Fabric Sensor System on

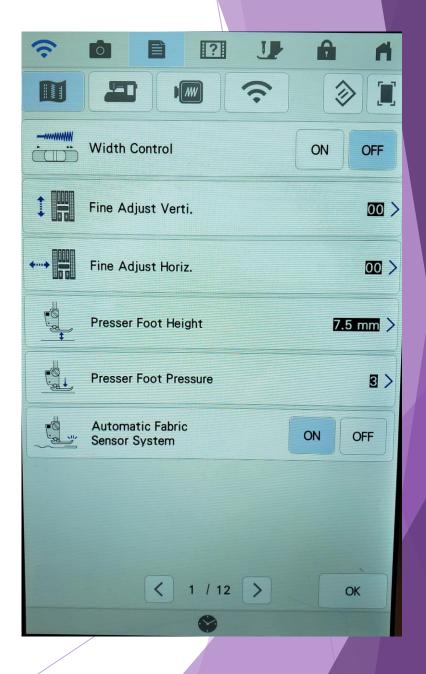

Machine Settings Screen-

page 2 of 12

- Initial Position-choose between stitch 1-01 straight stitch, left or stitch 1-03 straight stitch, center as the utility stitch that is automatically selected when the machine is turned on
- Pivoting Height & Free Motion Foot Height: choose the height at which you prefer your presser foot when pivoting or when using the free motion foot. Default settings are highlighted in black.
- Automatic Presser Foot Lift All functions must be set to ON then the presser foot will go down automatically when the foot control (or go button) is pressed. It will also raise when sewing is done and after a thread cut.

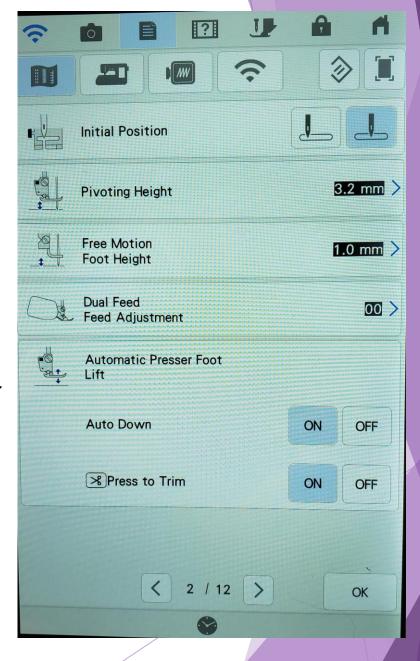

Sewing Settings-

Page 3 of 12


- Initial Stitch Page-choose the selection screen that appears when Sewing is pressed on the Home Screen-Utility Stitch or Quilt Stitch
- Reinforcement Priority: Choose On
- End Point Setting: Choose On



Machine Settings-

Page 4 of 12


- Language 12 available options
- Light
- Screen Display Brightness
- Upper and Bobbin Thread Sensor- ON
- Machine Speaker Volume
- Needle Position Stitch Placement On

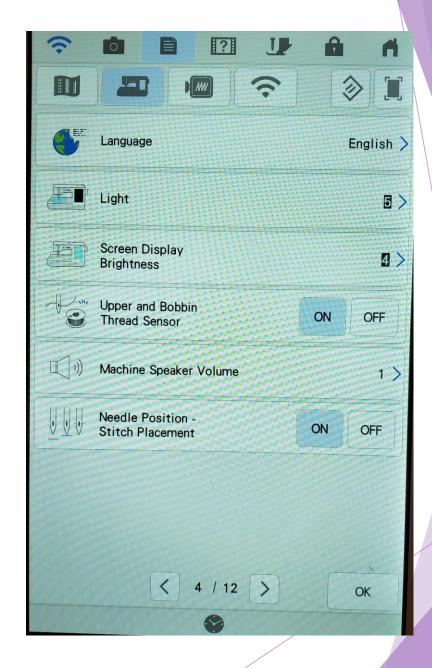

Machine Settings-

Page 5 of 12


- Opening Screen
- Eco Mode
- Screen Saver
- Mouse Pointer

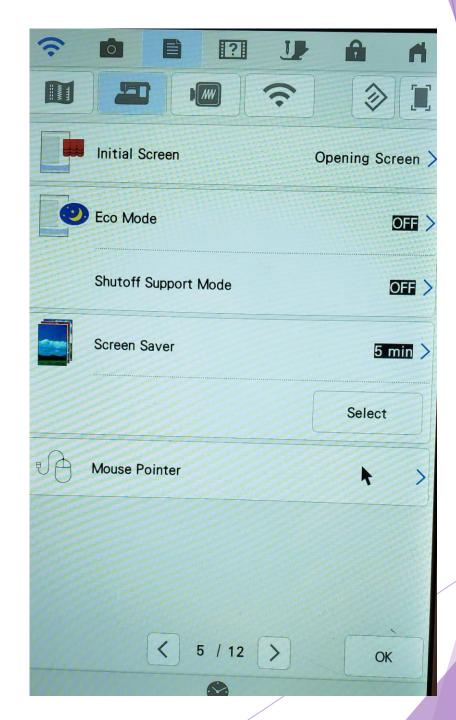

Projector Information

Page 6 of 12


- Brightness levels 1 4
- Background Color white, black, gray
- Pattern Outline on
- **Pointer Color** green, red, black
- Pointer Shape T or circle
- Camera needle position setting calibrates the needle position drop projection

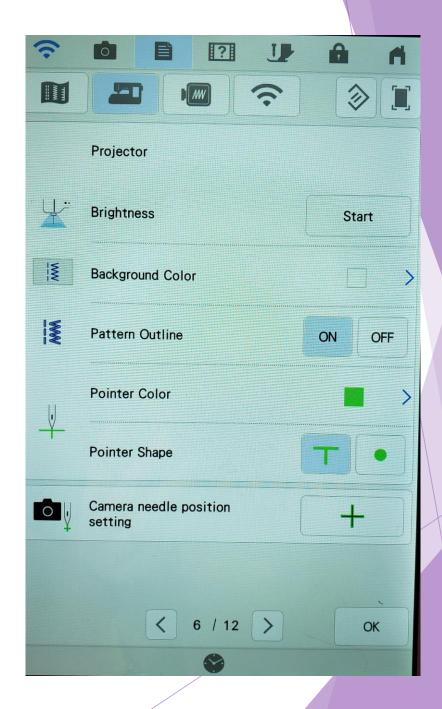


Machine Settings-

page 7 of 12

- Upgrade Kits
- Service Count-how many stitches are on the machine since the last servicing
- **Total Count** total number of stitches on the machine
- Machine Number
- Version-check here to be sure you have the latest update

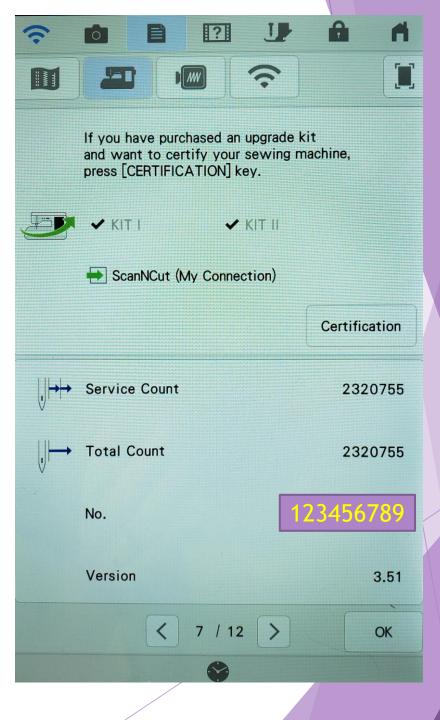

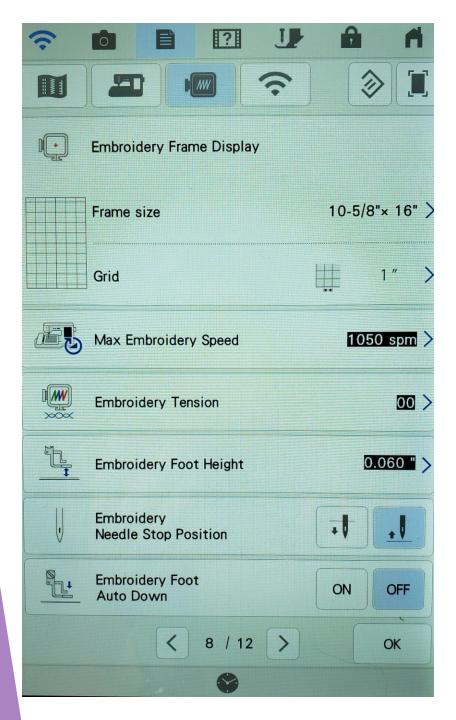

Embroidery Settings


Page 8 of 12

- Embroidery Frame Display-Hoop Size, grid size
- Max Embroidery Speed-1050 is the fastest
- Embroidery Tension Don't touch: job for Technician
- Embroidery Foot Height
- Embroidery Needle stop position up or down
- Embroidery Foot Auto Down

Embroidery Settings

Page 9 of 12


- Unit toggle between millimeters and inches
- Thread Color Display by name or number, some brands
- Thread brand choose the brand you're using.
- Embroidery Background color
- Thumbnail Background color
- Thumbnail Size
- **Embroidery Basting Distance**-the higher the setting, the farther the basting is from the pattern

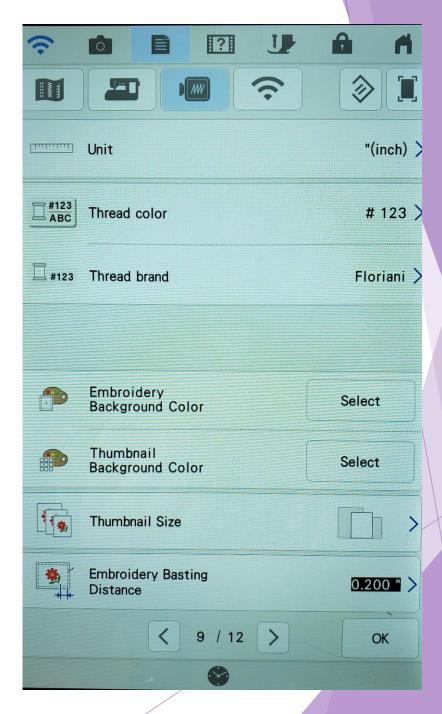

Scanner Settings

Page 10 of 12


- Background Image Display Press the Delete key to clear your screen after you have scanned (otherwise, your most recent scan will show up as background the next time you go to My Design Center).
- Automatic Fabric Sensor System the machine will automatically detect the thickness of the fabric and adjust to ensure the fabric is fed smoothly.
- Embroidery Foot with LED Pointer Adjustment

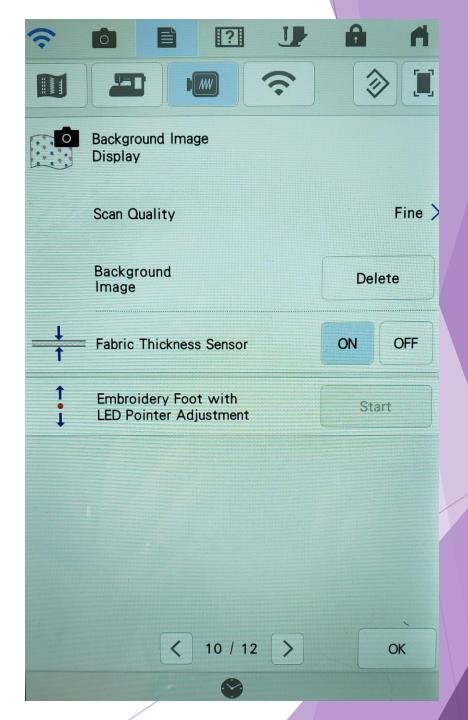

Network Settings

Page 11 of 12

- Wireless LAN Enable on to set up wireless at home
- Wireless LAN Setup Wizard walks through the setup
- Machine Name have fun! Give it a name!
- Wireless LAN Status
- Others
- Network Reset
- App Guide

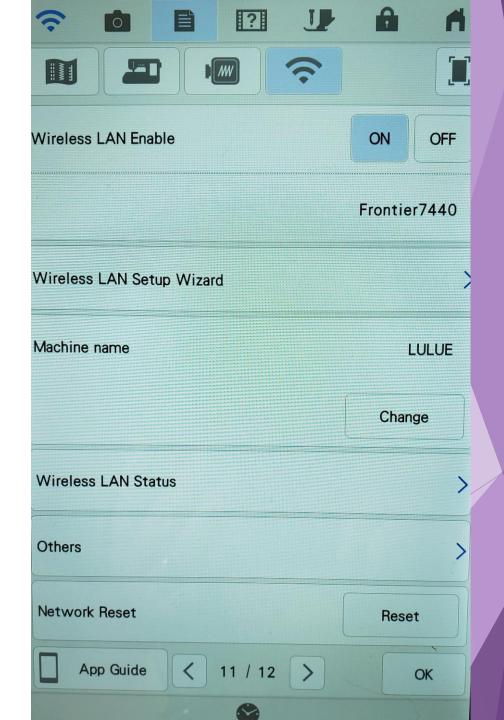

Update Settings

Page 12 of 12

- Auto Download when on will update by itself
- Update manually
- Status
- Latest Version
- Click **OK** to save your adjustments and exit the Machine Settings Screen.

